

# SeKi Universal remote control

## For Use with Samsung Series TV / LCD / LED / HDTV



 
Thank you for choosing this remote control. Please insert batteries (2x AAA) and test the remote control with your device. If it works well, there is no need to set it up anymore. If it does not work, please refer to one of the following setting methods. This remote control is able to control 98% of the models of the SAMSUNG brand without any manual setting. The „SeKi replacement for Samsung“ keeps all settings when changing batteries.

### Options for manual settings


#### A. Input Code

**Code List:** 001.002.003.004.005.006. 007.008. 009.010.011.012.013.014.015.016

**A1.** Press and hold the keys [MUTE] and [POWER], after 3 seconds the LED will light.



 **A2.** Release the keys and enter the three-digit code from the above code list. When the code input is finished, the LED will turn off.



**A3.** Please try to use the remote control. If it doesn't work well, please try other code: [002], [003], [004], ...

**NOTE:** If the three-digit code is invalid, the LED will flash twice and keep light. If the code is correct, the LED light will turn off. If you want to exit the setting process, please press the [MUTE] key.

#### B. Fast Search

**B1.** Press and hold the keys [MUTE] and [POWER], after 3 seconds the LED will light. Release the keys.

**B2.** Press the key [CH ^]. Each time you press it, the remote control will search once. When the channel changes, you can test the function of key [POWER]. Try the next keys like [VOL+], [MENU], the number keys [0-9] and so on. If they all work well, press [MUTE] to save and exit.

**B3.** If it doesn't work well, please repeat from Step B2.

#### C. Code inquiry

Check which code the remote control is currently using.

**C1.** Press and hold the [MUTE] key first, then press [POWER] as well, after 3 seconds the LED will light, release the keys.

**C2.** Enter [9][9][0] with the number keys. The LED flashes twice and then turns off.

**C3.** To get the number for each of the digits of the code press the keys [1],[2],[3]. For example: Pressing [1] the LED will start to flash. It flashes in the number of the first code digit. If the code number is [0], the LED will not flash. Repeat the process for all three digits respectively with the keys [2] and [3].

 
#### D. Learning Function

**NOTE:** During the learning process, if no key is pressed within 25 seconds the learning mode will be exited without saving.


**D1.** Press and hold the key [MUTE] first, then long press [VOL+] as well about 5 seconds, the LED will light. Release the two keys. It is ready to learn.




**D2.** Point the original remote control at the SeKi. The distance should be 3-5 cm. Avoid strong interference light from ambient lamps or the sun.



 **D3.** Press any key on the original remote control. The SeKi remote control LED flashes after receiving the information. Release the button. Then press the corresponding function key on the SeKi remote control. The LED indicator flashes twice and stays on. Please repeat step D3 to learn more function keys.

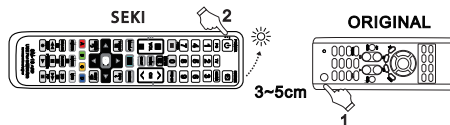

 **D4.** When you have finished learning all the keys, first press and hold the [MUTE] key. Then press the [VOL -] button. The settings will be saved and the LED goes out.



#### E. Compatible Remote Control Models

Due to too many different compatible remote control models we only list some below. If your remote control is similar to one of the picture, then our remote control can control your device.



WEEE-Reg.-Nr. DE 60722497

Matrix Handels GmbH • Industriestr. 12  
DE-91186 Büchenbach

[www.my-seki.com](http://www.my-seki.com)